Please Return to Librarian 6-7744 - manual #3

POLARAD
PROVEN RELIABILITY

HANDBOOK
OF
OPERATING INSTRUCTIONS

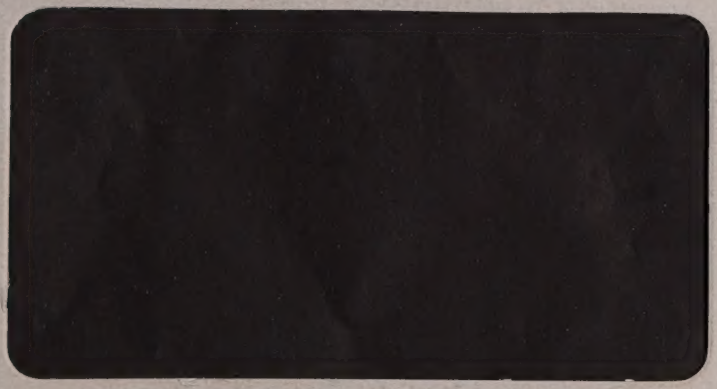

PLEASE RETURN TO LIBRARIAN
ORG. 6-7744 M.S. 27-14
manual # 3

POLARAD ELECTRONICS CORPORATION, 43-20 34th STREET, LONG ISLAND CITY 1, N.Y.

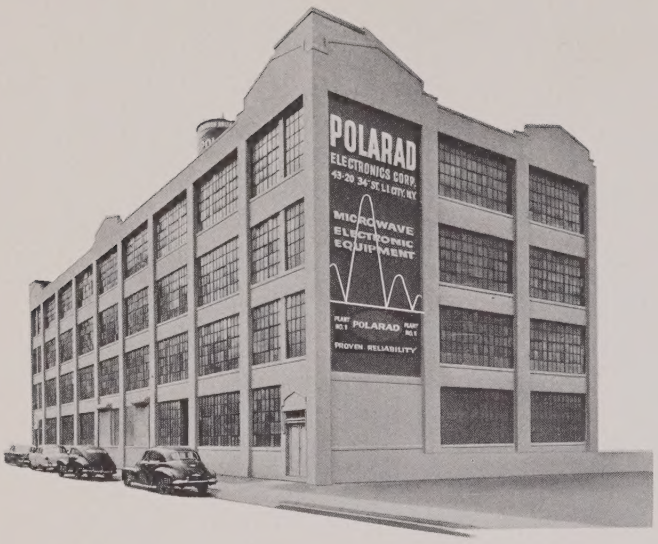

PLANT 1

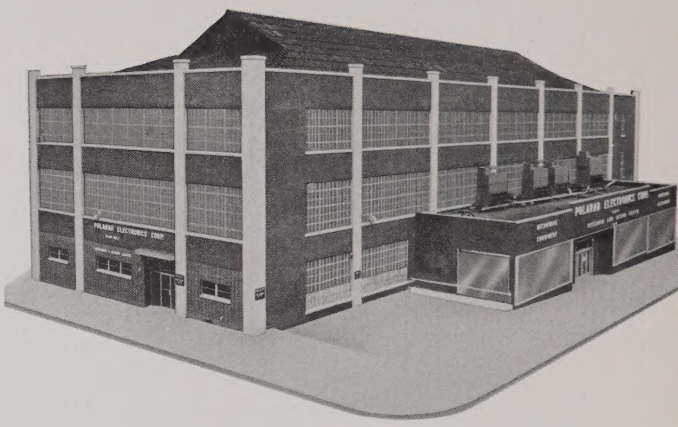

PLANT 2

ENGINEERING & ADMINISTRATIVE OFFICES

43-20 34th STREET
LONG ISLAND CITY, NEW YORK
EXETER 2-4500

RESEARCH & DESIGN CENTER

33-10 QUEENS BLVD.
LONG ISLAND CITY, NEW YORK

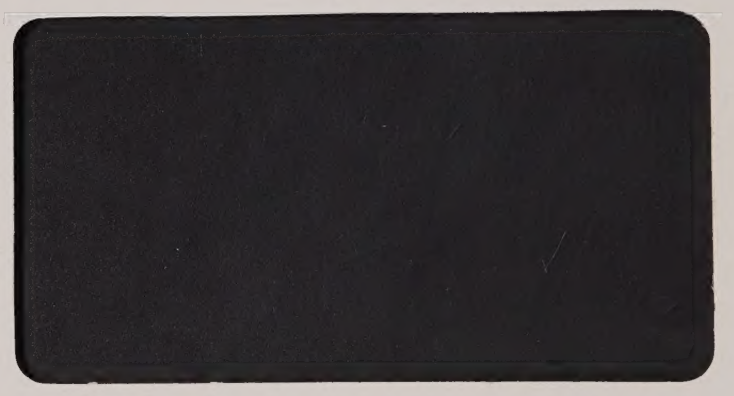

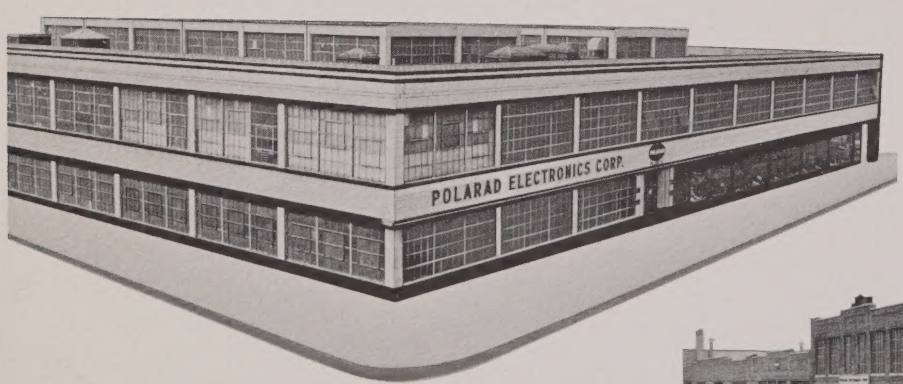

PLANT 4

PRODUCTION ENGINEERING & FACTORY
34-02 QUEENS BLVD.
LONG ISLAND CITY, NEW YORK

PERSONNEL RECRUITMENT & WAREHOUSE
43-15 34th STREET
LONG ISLAND CITY, NEW YORK

PLANT 3

POLARAD ELECTRONICS CORPORATION 43-20 34th STREET, LONG ISLAND CITY 1, N. Y.

Return

POLARAD

PROVEN RELIABILITY

INSTRUCTION MANUAL

MICROWAVE SIGNAL SOURCE MODEL SSR

PLEASE RETURN TO LIBRARIAN
ORG. 6-7744 M.S. 27-14
manual # 3

SERIAL NO'S 101 TO 136

POLARAD ELECTRONICS CORPORATION • 43-20 34th St., Long Island City 1, N. Y.

©Polarad Electronics Corporation, 1961

Warranty

Polarad Electronics Corporation warrants each instrument of its manufacture to be free from defects in material and workmanship. Our obligation under this Warranty is limited to servicing or adjusting any instrument returned to our factory for that purpose, and to making good at our factory any part or parts thereof except tubes, fuses or batteries, which shall, within one year after making delivery to the original purchaser, be returned to us with transportation charges prepaid, and which on our examination shall disclose to our satisfaction to have been thus defective.

Polarad Electronics Corporation reserves the right to make changes in design at any time without incurring any obligation to install same on units previously purchased.

This Warranty is expressly in lieu of all other obligations or liabilities on the part of the Polarad Electronics Corporation, and Polarad neither assumes nor authorizes any other person to assume for them any other liability in connection with the Sales of Polarad's instruments.

POLARAD
PROVEN RELIABILITY

TABLE OF CONTENTS

Section		Page
I.	INTRODUCTION	
	1-1. Scope of Manual	1
	1-3. Uses of the Model SSR Microwave Signal Source	1
	1-5. General Description	1
	1-8. Technical Characteristics	1
	1-9. Accessories Supplied	1
II.	OPERATION	
	2-1. Operating Controls	3
	2-3. Operating Procedure	3
	2-4. Setting-Up the Equipment	3
	2-5. CW Operation	3
	2-6. FM Operation	3
	2-7. Square Wave Modulated Operation	3
	2-8. Turning Power Off	3
III.	PRINCIPLES OF OPERATION	
	3-1. General	4
	3-3. Klystron Oscillator	4
	3-6. Klystron Cavity	4
	3-8. Detailed Circuit Analysis	4
	3-13. Frequency Control	5
	3-15. Protective Diode	5
	3-18. Modulating Circuits	5
	3-22. Mechanical Drive System	5
IV.	MAINTENANCE	
	4-1. General	6
	4-3. Pre-Operational Checks	6
	4-4. Klystron Tube Replacement	6
	4-5. General	6
	4-6. Klystron Tube Removal	6
	4-7. Klystron Tube Replacement	6
	4-8. Repeller Voltage Tracking Adjustments	6
	4-10. Re-Positioning the Klystron Probe Assembly	10
	4-11. Mode Offset Control Adjustment	11/12
	4-12. Voltage and Resistance Measurements	11/12

LIST OF TABLES

Table		Page
2-1.	Operating Controls	3
4-1.	Repeller Voltage Tracking Adjustments	8
4-2.	Tuning Dial Calibration Procedure	10

LIST OF ILLUSTRATIONS

Figure		Page
1-1.	Model SSR Microwave Signal Source	ii
4-1.	Modulation Test Set-Up Diagram	7
4-2.	Alignment Test Set-Up	8
4-3.	Top View of Signal Source	9
4-4.	Phase Shift Adjustment	10
4-5.	Set-Up for Adjustment of MODE OFFSET Control	11/12
4-6.	Typical Waveforms for Adjusting MODE OFFSET Control	11/12
4-7.	Model SSR Microwave Signal Source, Voltage and Resistance Measurements	13/14
4-8.	Model SSR Microwave Signal Source, Schematic Diagram	15

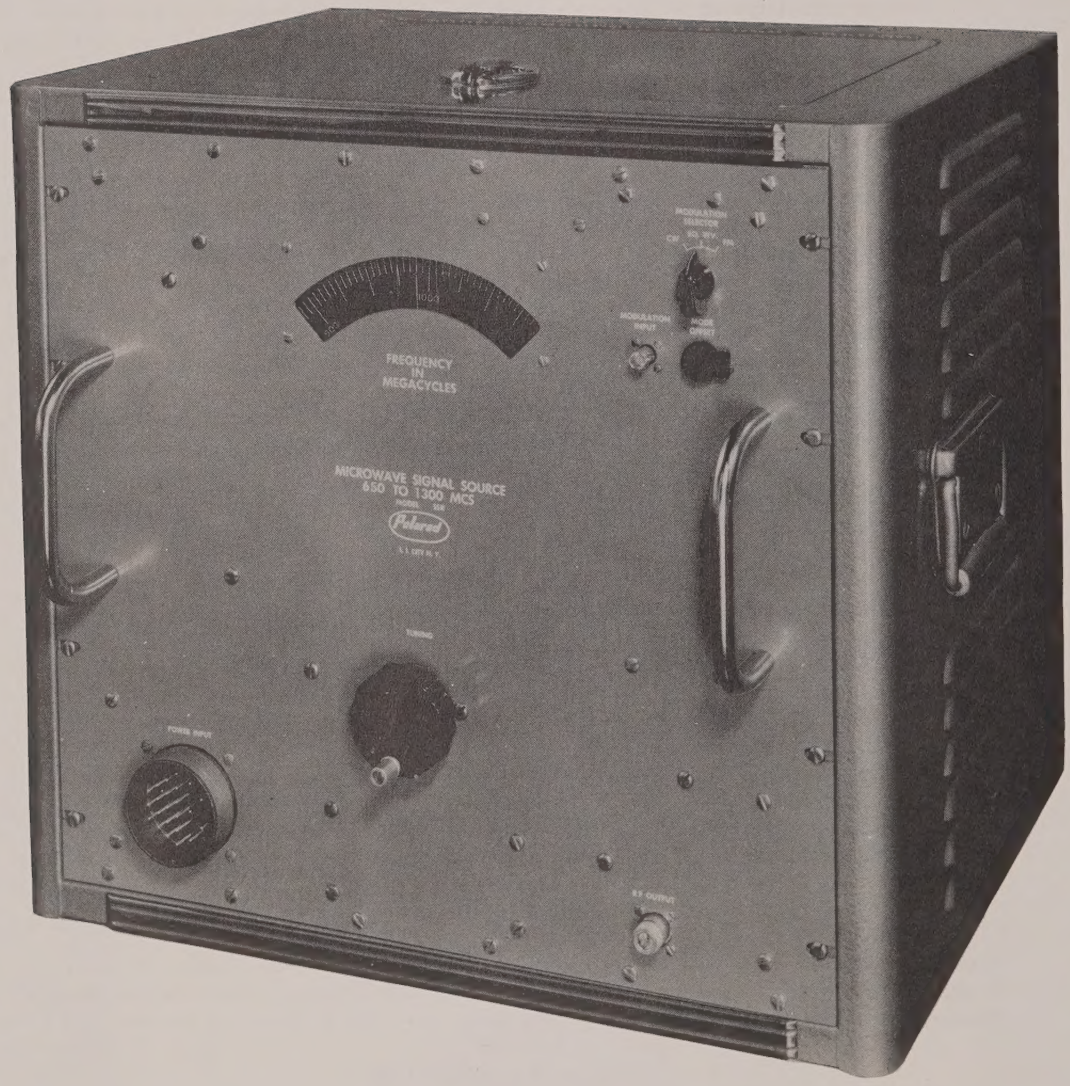

Figure 1-1. Model SSR Microwave Signal Source

MODEL SSR MICROWAVE SIGNAL SOURCE

SECTION I
INTRODUCTION

1-1. SCOPE OF MANUAL.

1-2. This instruction manual contains directions for the installation, operation, and maintenance of the Polarad Model SSR Microwave Signal Source (figure 1-1). This signal source is one of six Polarad microwave signal sources which provide a reliable source of microwave energy over the frequency range of 650 mc to 11,500 mc. Model SSR provides microwave energy from 650 mc to 1300 mc. The manual also contains a listing of the technical characteristics, as well as a brief theory of operation of the equipment. The unit is designed and manufactured by Polarad Electronics Corporation, Long Island City, New York.

1-3. USES OF THE MODEL SSR MICROWAVE SIGNAL SOURCE.

1-4. Polarad's Microwave Signal Sources are used wherever a reliable source of microwave energy is desired, such as antenna measurements, standing wave determination, insertion loss, "Q", and gain measurements. The maximum output power is between 10 and 20 db greater than comparable signal generators. This feature permits the measurement of wider ranges of attenuation, of the minor lobes of an antenna, etc., without requiring signal preamplification or other means of increasing receiver sensitivity.

1-5. GENERAL DESCRIPTION.

1-6. The Polarad Model SSR contains an external cavity klystron local-oscillator, a modulation circuit and modulator power supply, a potentiometer adjustment panel, and a mechanical drive system. The unit is tuned manually by rotating the single TUNING knob, which simultaneously drives a non-contacting choke within the oscillator cavity, a tracking potentiometer for changing reflector voltage automatically, and a tuning dial which indicates frequency in megacycles accurately to ±1%. The chassis and oscillator castings are secured to the front panel. Two U-shaped handles, located at the sides of the front panel, are provided for ease in removing the unit from or returning the unit to its dust cover cabinet. If desired, the unit may be mounted in an open relay rack which is provided with mounting holes having standard Western Electric spacing. Two chest handles are provided on the sides of the dust cover cabinet for carrying purposes.

1-7. The signal source is normally powered from a Polarad Model KX-B Klystron Power Supply. A standard type AN3102A-40-2P receptacle is mounted on the front panel for power input. The Model KX-B Klystron Power Supply is highly regulated to minimize incidental modulation of the klystron by means of a front panel selector switch. Model KX-B Klystron Power Supply provides selection of the proper voltages for the signal source to which it is connected. If another power supply is used, it should be capable of delivering the power requirements of the signal source, since proper voltages must be supplied to maintain the signal source frequency calibration.

NOTE

The klystron oscillator anode is operated at ground potential and accelerating voltages are therefore applied to the klystron cathode. This accelerating voltage is referred to as "anode voltage" in the Model KX-B Klystron Power Supply however, and is monitored by a front panel ANODE VOLTAGE meter. The accelerating voltage is called anode voltage in this manual.

1-8. TECHNICAL CHARACTERISTICS.

Frequency Range	650 mc to 1300 mc
Tuning Dial Accuracy	Better than ±1%
Power Output Range	100 to 700 mw
Modulation	External (FM or square wave)
Requirements for external square wave modulation:	
Repetition Frequency	100 to 5000 pps
Amplitude	40 volts
Requirements for external frequency modulation:	
Waveform	Sawtooth or sine wave
Frequency	50 to 10,000 cps
Power Input:	
DC	-400 v, -406 v, -1000 v
AC	6.3 volts, 2 amps; 115 v, 60 cps
Tube Complement	One QK-201(5777); two 6X4; one 6AU6; two OB2
Dimensions	19-1/2 high by 23 wide by 17-3/4 inches deep
Weight	70 lbs. uncrated

1-9. ACCESSORIES SUPPLIED.

a. When the Model SSR Microwave Signal Source is purchased with a Polarad Model KX-B Klystron Power Supply, the following accessories are supplied:

(1) One connecting cable assembly, part No. AP12544.

(2) One BNC to BNC video cable assembly, part No. BP12553.

(3) One R-F cable assembly, part No. BP12551.

(4) One power cord, part No. B24358-15.

(5) One wrench kit, part No. A25109.

b. When the Model SSR Microwave Signal Source is purchased without a Polarad Model KX-B Klystron Power Supply, the following accessories are supplied:

(1) One plug AN3106-40-2S with AN3057 cable clamp, for mating front panel POWER INPUT receptacle.

(2) One BNC to BNC video cable assembly, part No. BP12553.

(3) One R-F cable assembly, part No. BP12551.

(4) One wrench kit, part No. A25109.

SECTION II
OPERATION

2-1. OPERATING CONTROLS (See figure 1-1).

2-2. All operating controls are located on the front panel. Table 2-1 lists the controls and their functions.

TABLE 2-1. OPERATING CONTROLS

Control	Function
TUNING	Controls the operating frequency, as indicated on the direct-reading frequency dial
MODULATION SELECTOR	Selects the internal circuits to permit external square wave modulation, f-m modulation, or CW operation
MODE OFFSET	This control determines reflector voltage during the "off" interval, in square wave modulation

2-3. OPERATING PROCEDURE.

2-4. SETTING-UP THE EQUIPMENT.

a. Connect the power cable. When using the Polarad Model KX-B Klystron Power Supply, set the power supply ON-OFF switch to ON.

CAUTION

If the reflector supply voltage is not present within 30 seconds from the time the power is applied, turn the ON-OFF switch of the Model KX-B Klystron Power Supply to OFF.

b. With a power supply other than the Model KX-B Klystron Power Supply, apply the potentials in the following sequence:

(1) Heater voltage (6.3 v ac).

(2) Reflector supply voltage (negative 600 volts with respect to cathode).

(3) Control grid supply voltage (range from -6 volts to +6 volts with reference to cathode).

(4) Anode voltage (negative 400 volts).

c. After a ten-minute warm-up period, the CATHODE CURRENT METER of the Model KX-B Klystron Power Supply should indicate 40 ma; if this indication is not obtained, adjust the INCREASE CATHODE CURRENT control to obtain a meter reading of 40 ma.

2-5. CW OPERATION. To operate the equipment as a source of cw microwave energy, set up the equipment as directed in paragraph 2-4 above, and proceed as follows:

a. Set the MODULATION SELECTOR to CW position.

b. Rotate the TUNING dial to the desired frequency.

2-6. FM OPERATION. To frequency modulate the output, turn the MODULATION SELECTOR to FM position, and apply a sawtooth or sine wave modulating signal from an external source into the front panel MODULATION INPUT jack. The frequency of the external modulating signal may be within the range of 50 to 10,000 cps.

2-7. SQUARE WAVE MODULATED OPERATION. To obtain square wave modulated output, proceed as follows:

a. First check the MODE OFFSET control as directed in paragraph 4-6.

b. Turn the MODULATION SELECTOR to its SQ. WV. position.

c. Apply a square wave signal from an external source to the MODULATION INPUT jack. The repetition frequency of the square wave signal may be within the range of 100 to 5000 pps, at a peak amplitude up to 40 volts.

2-8. TURNING POWER OFF.

CAUTION

Always turn the cathode voltage off before turning off the reflector supply voltage. Failure to observe this precaution may destroy the reflex klystron oscillator tube.

2-9. When using a power supply other than the Polarad Model KX-B Klystron Power Supply, turn off the voltages in the following order:

a. Cathode voltage.
b. Control grid voltage.
c. Reflector supply voltage.
d. Heater power.

2-10. When using the Model KX-B Klystron Power Supply, voltages are automatically discontinued in the proper sequence when the Model KX-B POWER switch is rotated to the OFF position.

SECTION III
PRINCIPLES OF OPERATION

3-1. GENERAL.

3-2. The Model SSR Microwave Signal Source is a continuous-wave signal source which provides a signal of known frequency in the range from 650 to 1300 mc. Three types of output are available: continuous wave, square-wave modulated, or frequency-modulated. Modulating signals from an external source are required for square wave and frequency modulated output. The Signal Source SSR consists, essentially, of a reflex klystron r-f oscillator assembly, a modulating amplifier, and a regulated power supply which furnishes power for the modulator circuit. The function of each circuit is described in paragraphs 3-3 through 3-23, below.

3-3. KLYSTRON OSCILLATOR.

3-4. The r-f oscillator tube, V1, is a type 5777 (QK201) velocity-modulated, reflex klystron, operating in an external resonant cavity. The cavity is at 1/4 wave length. A 1-3/4 klystron reflector mode is employed throughout the frequency range. The resonant cavity connects to two of the klystron electrodes, called resonator grids. The resonator grids are physically separated from the cathode by an accelerator grid, which serves to speed up the flow of electrons from the cathode. The reflector (or repeller) electrode, located on the other side of the resonator grids, is connected to a source of high negative potential. The repeller serves to reflect (or repel) the streams of electrons back towards the cathode.

3-5. The resonant cavity used with the klystron is tuned by means of a non-contacting shorted type of choke, which is actuated by a friction drive mechanism, as described in paragraph 3-23, below. The accelerator grid potential is adjusted by a potentiometer connected between two potential sources, which are six volts negative and six volts positive with respect to cathode. The voltage applied to the reflector electrode is varied, to track simultaneously with tuning dial rotation, by means of tracking potentiometer R3. Two chassis controls, designated Low Limit (R4) and High Limit (R2), set the end voltage limits. The output of the oscillator is delivered to the front panel RF OUTPUT jack by means of a fixed probe assembly.

3-6. KLYSTRON CAVITY.

3-7. The external resonant cavity is in the form of a coaxial transmission line, and consists of two cylinders (one concentric with the other). The klystron is inserted at one end of this line so that the first resonator grid (nearest the cathode) makes contact with the outer cylinder. At the other end, the circuit is completed by a movable non-contacting shorted type of choke. The position of this choke determines the electrical dimensions of the cavity and, therefore, the resonant frequency of the cavity. The resonator grids represent a small amount of capacity across the resonant cavity, and permit the cavity dimension to be somewhat shorter in physical length than would otherwise be required.

3-8. DETAILED CIRCUIT ANALYSIS (See figure 4-8).

3-9. When the klystron is energized, the initial and random current variations in the tube start the resonant circuit into oscillation. As the electrons stream past the resonator grids, they are subjected to the periodic variations of the resonant electric field existing between the grids. When the electrons pass through the electric field between the resonator grids, some are speeded up when the field is positive, while others are slowed down when the field swings negative. While the total density of the stream of electrons is always the same, along any given part of the stream, the density is found to vary in groups of electrons, with some moving somewhat faster than others.

3-10. The electrons move past the resonator grids and approach the highly negative repeller electrode, some at a higher rate of speed than others. The highly negative potential of the repeller causes the electrons to reverse their direction of travel and proceed back toward the resonator grids. The faster electrons travel further toward the repeller, and take a longer time to return to the interaction space. But, since the faster-moving electrons have originally passed the grids at an earlier time than the slower-moving ones, the faster-moving electrons return to the grids at the same time as the slower-moving ones.

3-11. Therefore, both types of electrons (fast and slow moving) tend to bunch up as they return to the resonator grids. The bunches tend to center at those electrons which initially passed the resonant field when the r-f voltage across it was approaching zero. If the bunched electrons arrive at the grids when the field is at a maximum positive, they will encounter maximum opposition to their movement across this field, and they will give up energy to the tank circuit. This energy replaces circuit losses and sustains oscillation.

3-12. It is important to note that the time it takes for the electrons to return from their journey toward the repeller is determined by the magnitude of the repeller voltage. In addition, the optimum time for sustained oscillation is an integral number of cycles plus three quarters of a cycle (such as 1-3/4, 2-3/4, 3-3/4, etc.) between successive crossings of the space between the resonator grids by the same electrons.

3-13. FREQUENCY CONTROL.

3-14. At any given setting of the cavity, there will be an optimum value of repeller voltage which will cause the bunched electrons to arrive at the resonator grids, as nearly simultaneously as possible. In order to achieve this result, a mechanical arrangement is used. As the tuning dial is rotated, the shaft of the repeller tracking potentiometer simultaneously rotates with the dial. This action varies the repeller voltage over a range from approximately minus 400 volts to minus 1000 volts.

3-15. PROTECTIVE DIODE (See figure 4-8).

3-16. For proper operation of the klystron and for safety reasons, the repeller voltage must never be allowed to become positive with respect to the cathode. A circuit, using a type 6X4 rectifier, is employed as a protective diode and is connected between the cathode, pin 3, and the repeller electrode of the klystron oscillator.

3-17. If the repeller voltage should swing positive for any reason, the protective diode V2 will conduct. The return circuit for V2 (consisting of R7, R9, and R8) will have a voltage developed across it. Since the plate-to-cathode resistance of diode V2 is much smaller than the plate load resistors when the diode is in a conducting state, most of the voltage drop will take place across the load resistors. The potential at the plates of the diode will be of negative polarity, and will satisfy the condition of maintaining the klystron repeller at a negative potential, with respect to its cathode.

3-18. MODULATING CIRCUITS (See figure 4-8).

3-19. With the MODULATION SELECTOR S1 rotated to the CW position, the cathode, pin 7, of modulation amplifier V3 is open-circuited by one section of switch S1, and the modulation amplifier is effectively removed from the circuit. Any signal applied to the front panel MODULATION INPUT jack J3 is connected to chassis ground through the second section of switch S1.

3-20. With the MODULATION SELECTOR S1 rotated to its SQ. WV. position, the cathode, pin 7, of modulation amplifier V3 is returned to the center tap of power transformer T1, by one section of switch S1. A square wave input signal, applied to the front panel MODULATION INPUT jack J3, is coupled (through the second section of switch S1) to the grid, pin 1, of modulation amplifier V3. The grid of V3 is clamped to the positive output of the power supply, through resistor R10. When a positive square wave signal is applied to the input, circuit action is as follows. The positive-going leading edge of a square wave input signal at the grid of V3 develops a voltage drop at the plate, pin 5, of the amplifier. This change in voltage is directly coupled to the repeller of the klystron tube, and drives the reflector voltage into the region where oscillation is prevented. At the end of the square wave duration, the negative-going trailing edge of the applied signal drives modulation amplifier V3 to cutoff, and the voltage at the klystron repeller is restored to its normal value (as in CW operation). The front panel MODE OFFSET control (R9) is used to set the repeller voltage to that value which prevents the klystron from oscillating during one-half of each square wave cycle. During the other half cycle, the repeller voltage is clamped to the value existing in CW operation. (Refer to paragraph 4-8 for adjustment instructions.)

3-21. With the MODULATION SELECTOR S1 rotated to its FM position, the cathode, pin 7, of modulation amplifier V3 is again open-circuited by one section of switch S1, and the modulation amplifier is effectively removed from the circuit. An f-m input signal, applied to the front panel MODULATION INPUT jack J3, is coupled (through the second section of switch S1) to the repeller electrode of the klystron tube. The percentage of deviation from the center frequency of operation is dependent on the amplitude of the applied modulating voltage.

3-22. MECHANICAL DRIVE SYSTEM.

3-23. The main drive shaft is friction driven by the TUNING knob through a planetary drive and disc which, together, introduce a reduction ratio of approximately 40:1. The main shaft drives the tuning dial, the tracking potentiometer, and the oscillator tuning cam. This oscillator tuning cam, in accordance with its contour, controls the setting of the oscillator choke assembly through a spring-loaded shaft.

SECTION IV
MAINTENANCE

4-1. GENERAL.

4-2. This section covers corrective maintenance for the signal source. Included are the instructions for replacing the klystron oscillator tube, the alignment procedure required after installing a new klystron tube, and the adjustment of the MODE OFFSET control. The material contained in this section is to be used in conjunction with the schematic circuit diagram, figure 4-8. Specific reference to this diagram is made throughout the text, where applicable.

WARNING

Application of power to this signal source results in very high voltages which are dangerous to life. Personnel must observe all safety precautions at all times. Do NOT attempt to remove the klystron tube from its cavity when operating power is ON.

4-3. PRE-OPERATIONAL CHECKS.

a. Examine all tubes, except the klystron, to see that they are firmly seated in their tube sockets.

b. Check that the rotation of the TUNING knob throughout its range, in both clockwise and counterclockwise rotation, is smooth and continuous; the knob must be tight on its shaft.

c. Examine all plugs and connectors, to see that they are firmly seated and screwed tight.

d. With operating power disconnected, check that the klystron protective cover, on the right side of the oscillator cavity, is firmly in place.

4-4. KLYSTRON TUBE REPLACEMENT.

NOTE

The klystron tube should be removed only after all other checks, including a check of the repeller tracking voltages as directed in table 4-1, have been made.

4-5. GENERAL. The klystron tube is partially within the oscillator cavity, which is assembled on the casting directly to the rear of the r-f unit front panel. The replacement procedure follows.

4-6. KLYSTRON TUBE REMOVAL.

a. BE SURE TO TURN OPERATING POWER OFF. Throw the POWER switch on the klystron power supply to the OFF position. In addition, remove the klystron power unit cable from the POWER INPUT receptacle, on the signal source front panel.

b. Remove the "breeze" clamp which secures the klystron protective cover to the klystron retainer nut. Then slide the cover back along the socket lead cable.

c. Gently pull the tube socket assembly away from the base of the klystron tube.

d. Use the spanner, supplied with the equipment, to loosen the knurled collar at the end of the cavity. DO NOT REMOVE THE COLLAR COMPLETELY.

e. Grasp the projecting end of the klystron tube, gently rotating it in a clockwise direction while simultaneously withdrawing the tube from its spring finger holders within the cavity. Disconnect the repeller lead.

f. With the power OFF, rotate the INCREASE CATHODE CURRENT screwdriver control to its extreme counterclockwise position (control is located on the adjustment panel).

4-7. KLYSTRON TUBE REPLACEMENT.

a. Insert the tube carefully within the center of the cavity. Press the tube all the way in, rotating clockwise, against a noticeable resistance as the internal contact ring-fingers make engagement, until two clicks are heard and the tube meets a positive stop. Connect the repeller lead.

b. Then re-tighten the large knurled collar, using the spanner.

c. Connect the socket to the base of the klystron tube. Use care to avoid breaking or bending the tube pins as the socket can be forced on in the wrong position; the tube will not operate in this case. (Pin No. 1 is the pin apart from the other three.)

d. Replace the klystron protective cover by clamping it in place with the "breeze" clamp.

e. Connect the klystron power unit cable to the POWER INPUT receptacle on the signal source front panel. Throw the POWER switch on the klystron power unit to its ON position. Allow a ten-minute warm-up period. Then readjust the repeller voltage and check the frequency dial calibration. (See paragraph 4-8.)

4-8. REPELLER VOLTAGE TRACKING ADJUSTMENTS (See figures 4-1 and 4-2).

4-9. The repeller voltage tracking procedure which follows assumes that the unit was previously aligned

and operating but that the klystron tube was changed. To set the repeller tracking voltages, a modulator, a phase shift circuit, a voltmeter, a coaxial crystal detector, a tee connector, a wavemeter and a high gain oscilloscope are required. The preliminary set-up follows:

a. Check the power supply voltage and adjust as necessary. After the one-minute delay period, the pointers of the three meters on the klystron power unit should deflect as follows:

(1) CATHODE CURRENT - slight or no deflection.

(2) REFLECTOR VOLTAGE - 400.

(3) ANODE VOLTAGE - 400.

b. With the power OFF, make the following connections:

(1) Connect the modulator circuit (see figure 4-1) to the MODULATION INPUT jack.

(2) Connect the phase shifting circuit (see figure 4-1) to the EXT HORIZ sweep input of the oscilloscope.

(3) Connect the output of the crystal detector (see figure 4-2) to the vertical input of the oscilloscope.

(4) Complete the set-up shown in figure 4-2.

c. Set the MODULATION SELECTOR to FM position.

d. Refer to table 4-1 to set the repeller tracking voltages, and to table 4-2 for frequency dial calibration.

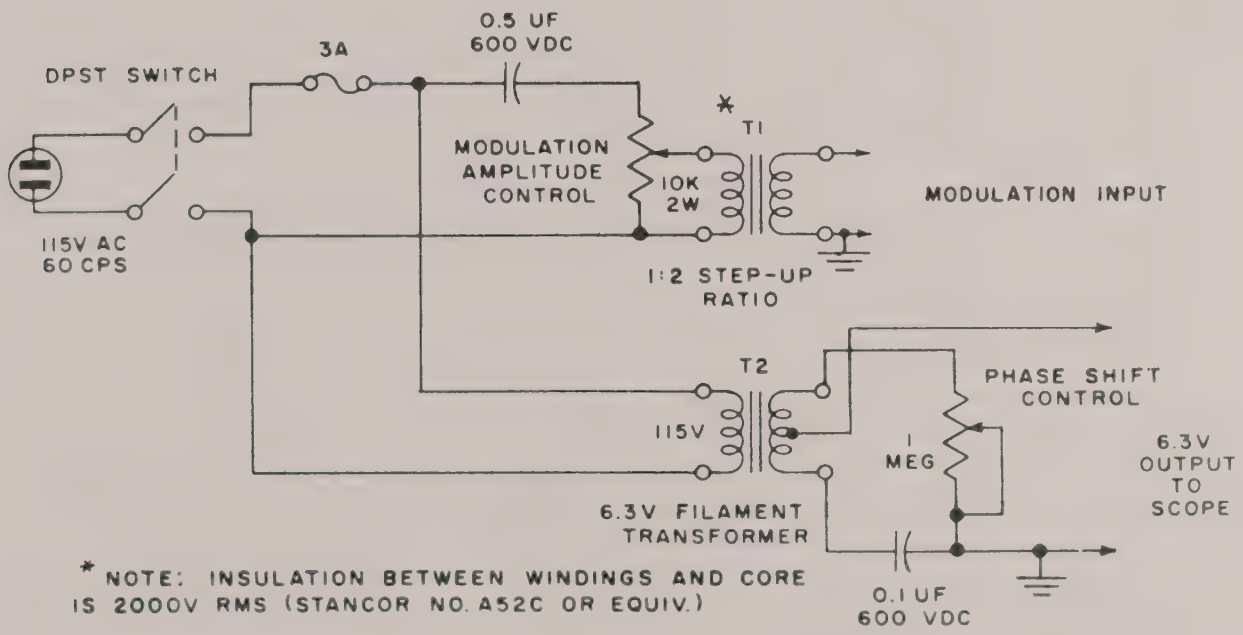

Figure 4-1. Modulation Test Set-Up Diagram

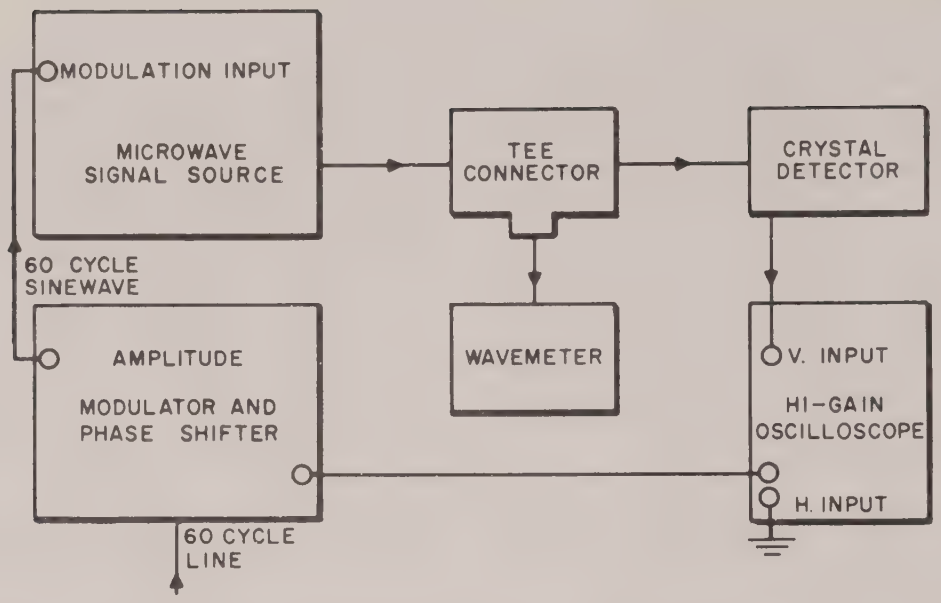

TABLE 4-1. REPELLER VOLTAGE TRACKING ADJUSTMENTS

Step	Adjustment	Adjustment Location	Normal Indication
1	Set POWER switch to ON position. Wait approximately one minute for the delay relay to complete its cycle.	Front panel of power supply	All pilot lamps on power supply light.
2	Rotate the INCREASE CATHODE CURRENT meter control clockwise until the pointer at the CATHODE CURRENT meter on power unit indicates 40 ma (Re-check and re-adjust, if necessary after a ten-minute operating period)	Reflector control board, on rear of oscillator housing (See figure 4-3)	CATHODE CURRENT indication remains at the 40 ma calibration mark
3	Rotate TUNING knob to set frequency dial to 1050 mc	Tuning unit front panel	1050 mc calibration mark appears under the index hairline
4	Adjust the modulation amplitude	Modulator unit (See figure 4-1)	A single mode pattern appears on the screen. (See figure 4-3)
5	Check the frequency by adjusting the wavemeter until a pip appears in center of mode	Wavemeter	Wavemeter reads within ±1% of dial calibration. If indication is normal, proceed with step 8. If indication is not normal, proceed with step 6
6	Set the wavemeter to 1050 mc. Loosen the No. 6 set screw which locks the push rod adjustment screw. Adjust the push rod to set the pip in the center of the mode	On oscillator push plate (figure 4-3)	Pip appears in center of mode
7	Lock the push rod adjustment screw in place, by tightening the No. 6 set screw	On oscillator push plate	The pip should remain centered on the mode
8	Rotate tuning knob to set frequency dial to 1300 mc	Tuning unit front panel	1300 mc calibration mark appears under the index hairline

TABLE 4-1. REPELLER VOLTAGE TRACKING ADJUSTMENTS (CONTINUED)

Step	Adjustment	Adjustment Location	Normal Indication
9	Adjust the modulation amplitude and phase control potentiometers	Modulator unit (See figure 4-1)	A single mode pattern appears on the screen. (See figure 4-4)
10	Adjust the HIGH LIMIT screwdriver control, R2	Reflector control board, on rear of oscillator housing	The mode moves to the center of the screen
11	Rotate tuning knob to low frequency end of dial	Tuning unit front panel	Dial is set at about 650 mc
12	Adjust the modulation amplitude and phase control potentiometers	Modulator unit (See figure 4-1)	A single mode pattern appears on the screen
13	Adjust the LOW LIMIT screwdriver control, R4	Reflector control board, on rear of oscillator housing	The mode moves to the center of the screen
14	Repeat steps 8 through 13 until no further adjustment is required		The modes remain centered, without further adjustment as the steps are repeated
15	Refer to table 4-2 and check the tuning dial calibration		

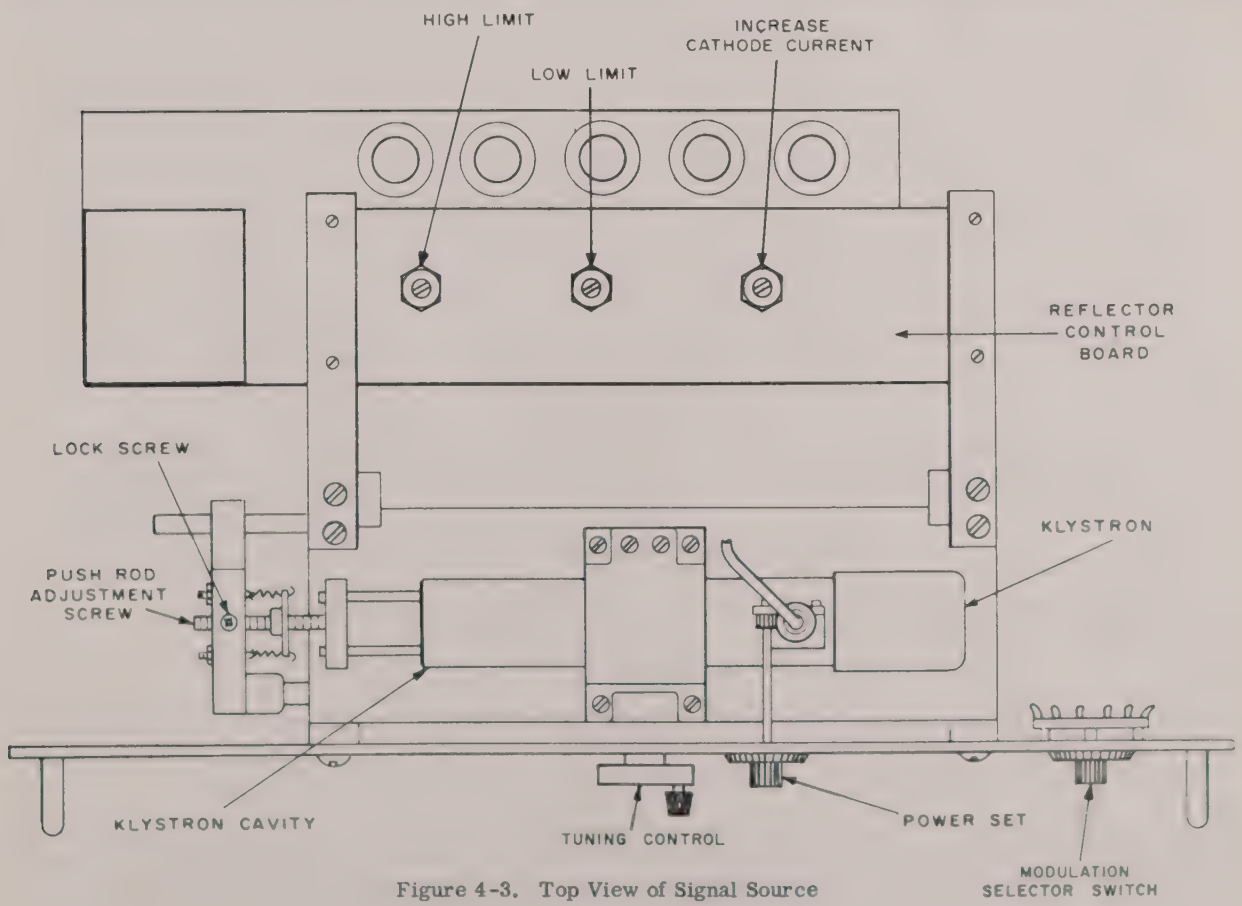

Figure 4-3. Top View of Signal Source

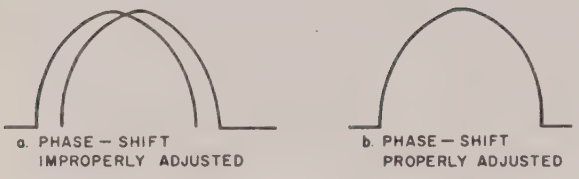

Figure 4-4. Phase Shift Adjustment

4-10. RE-POSITIONING THE KLYSTRON PROBE ASSEMBLY.

a. If the mode pattern does not appear, or has a tendency to collapse, at particular frequencies, the trouble may be an incorrectly positioned probe assembly.

b. To remedy this trouble, loosen the set screws which lock the probe in place on the oscillator cavity. Change the depth of penetration of the probe until the scope pattern shows a suitable indication of a definite strong mode pattern, at the first dial setting where trouble is first noticed. Tighten one set screw at this time.

c. Then proceed to other check frequencies. Readjust the position of the probe to obtain the best indication of a mode pattern at this frequency. Repeat this procedure at a number of check frequencies. Lock the probe in that position which produces the best possible mode pattern throughout the frequency range.

TABLE 4-2. TUNING DIAL CALIBRATION PROCEDURE

Step	Adjustment	Adjustment Location	Normal Indication
1	With the power OFF, connect the signal source and its test equipment as shown in figure 4-2		None
2	Turn the power ON-OFF switch to its ON position	Power supply front panel	1. All lights go on; proper current and voltage indications appear on the power supply meters 2. A mode appears on the scope
3	Rotate the TUNING knob to the high frequency end of the tuning dial, 1300 mc, and tune the wavemeter to the same frequency	Signal source front panel and wavemeter knob	A pip appears on the mode
4	Adjust the wavemeter so that the pip appears on the center of the mode	Wavemeter knob	Pip is centered on the mode. If the dial reading is greater than 1% of the wavemeter reading, proceed to step 6
5	Repeat steps 3 and 4 for all frequencies indicated on the tuning dial from 1300 mc to 650 mc	Signal source front panel and wavemeter knob	Dial frequency should be within 1% of wavemeter frequency at all points with the pip centered on the mode; if not, proceed to step 6
6	Set the dial reading and the wavemeter at 1050 mc*	Signal source front panel and wavemeter knob	Pip appears on mode
7	Loosen the No. 6 set screw which locks the push rod adjustment screw	Oscillator push plate	Pip should remain on the mode

* Calibrating the dial at this frequency will normally set both the high and low frequency extremes within ±1%. With some klystrons however, it may be necessary to compensate. For example, the dial might be set to slightly below 1050 mc to compensate for an out of tolerance (±1%) reading at one extreme. Care must be taken that the other extreme is not set out of tolerance, and step 5 should be repeated as a check.

TABLE 4-2. TUNING DIAL CALIBRATION PROCEDURE (CONTINUED)

Step	Adjustment	Adjustment Location	Normal Indication
8	Adjust the push rod adjustment screw to center the mode	On oscillator push plate	The pip should be centered
9	Lock the push rod adjustment screw in place by tightening the No. 6 set screw	On oscillator push plate	The pip should remain centered on the mode
10	Check the repeller tracking voltages (table 4-1) and repeat steps 3 through 9 of this table		Tuning unit should be accurately calibrated within 1%

4-11. MODE OFFSET CONTROL ADJUSTMENT.

a. With the MODULATION SELECTOR control in SQ. WV. position, assemble the signal source and test equipment, as shown in figure 4-5.

b. Note the position of the trace on the scope, corresponding to zero input to the scope. (OFF position on Y Attenuator of Model 304H Oscilloscope.) See figure 4-6a.

c. Set the MODULATION SELECTOR to CW; adjust the double stub tuner and power probe for maximum deflection of the trace from the position shown in step b, above. See figure 4-6b.

d. Set the MODULATION SELECTOR to SQ. WV. One side of the square wave on the scope display will be at cw level. However, if the MODE OFFSET control is not properly adjusted, the side will not be seen. A waveform such as that shown in figure 4-6d or figure 4-6e will appear on the scope. If this waveform is obtained, adjust the MODE OFFSET control to obtain a waveform similar to that illustrated in figure 4-6c.

4-12. VOLTAGE AND RESISTANCE MEASUREMENTS. Refer to figure 4-7 for a tube socket location diagram, which shows voltage and resistance measurements of the instrument, as an aid in trouble-shooting a malfunctioning equipment. Unless otherwise shown, all measurements are taken with the MODULATION SELECTOR at SQ. WV. position. Refer to the notes in figure 4-7 for all other conditions of measurement. See figure 4-8 for the over-all schematic diagram.

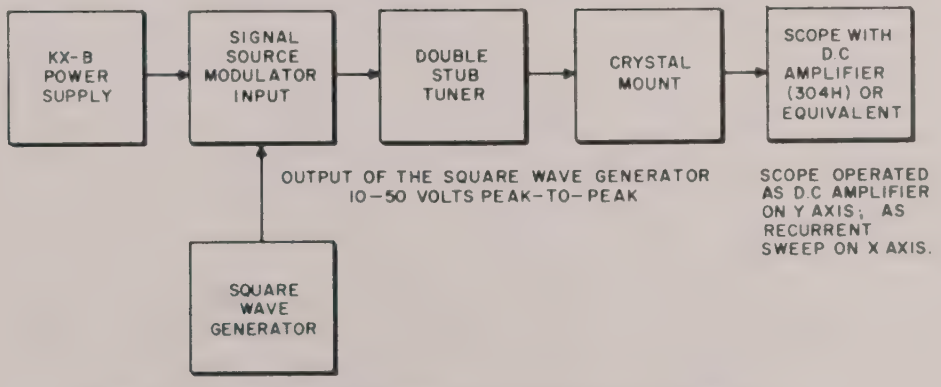
KX-B POWER SUPPLY
SIGNAL SOURCE MODULATOR INPUT
DOUBLE STUB TUNER
CRYSTAL MOUNT
SCOPE WITH D.C AMPLIFIER (304H) OR EQUIVALENT
OUTPUT OF THE SQUARE WAVE GENERATOR 10-50 VOLTS PEAK-TO-PEAK
SCOPE OPERATED AS D.C AMPLIFIER ON Y AXIS; AS RECURRENT SWEEP ON X AXIS.
SQUARE WAVE GENERATOR

Figure 4-5. Set-Up for Adjustment of MODE OFFSET Control

FIGURE 4-6a ZERO LEVEL ON SCOPE

FIGURE 4-6b ADJUST TUNER FOR MAXIMUM UPWARD DEFLECTION (SEE NOTE)

FIGURE 4-6c MODE OFFSET CORRECTLY ADJUSTED

FIGURE 4-6d MODE OFFSET INCORRECTLY ADJUSTED

FIGURE 4-6e

NOTE: THESE ILLUSTRATIONS ASSUME THAT CRYSTAL POLARITY AND SCOPE AMPLIFIERS ARE SUCH AS TO CAUSE UPWARD DEFLECTION ON CW RELATIVE TO ZERO IF THE DEFLECTION IS REVERSED, ALL FIGURES WILL APPEAR UPSIDE DOWN

Figure 4-6. Typical Waveforms for Adjusting MODE OFFSET Control

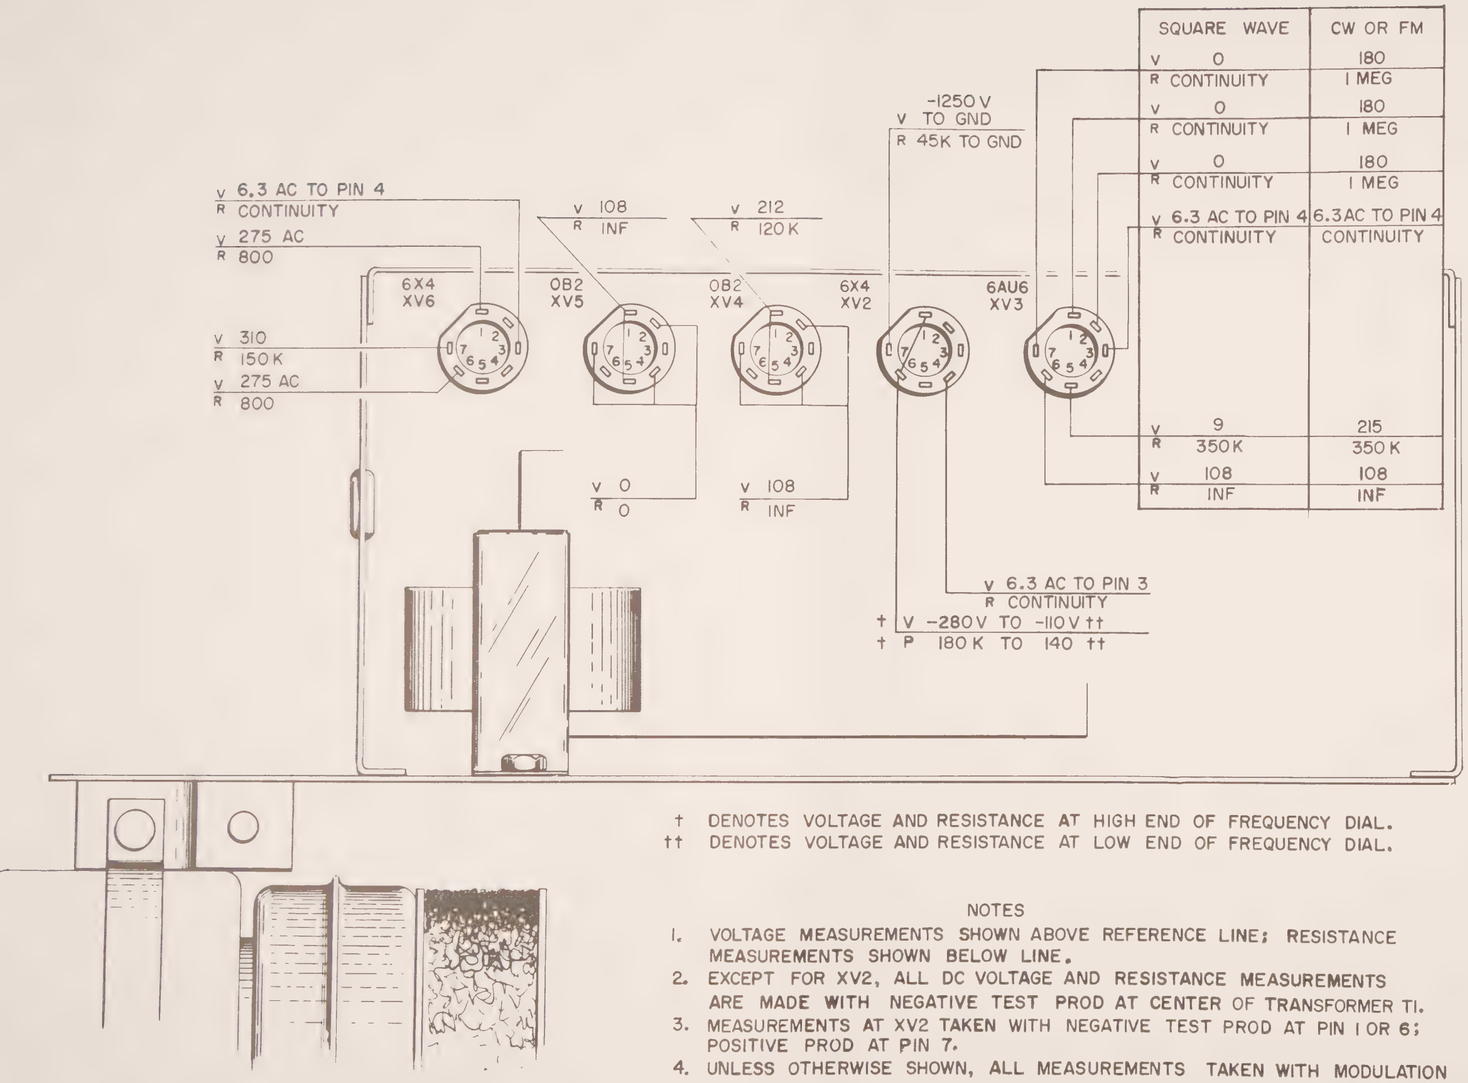

	SQUARE WAVE	CW OR FM
v	0	180
R	CONTINUITY	1 MEG
v	0	180
R	CONTINUITY	1 MEG
v	0	180
R	CONTINUITY	1 MEG
v	6.3 AC TO PIN 4	6.3AC TO PIN 4
R	CONTINUITY	CONTINUITY
v	9	215
R	350K	350 K
v	108	108
R	INF	INF

† DENOTES VOLTAGE AND RESISTANCE AT HIGH END OF FREQUENCY DIAL.
†† DENOTES VOLTAGE AND RESISTANCE AT LOW END OF FREQUENCY DIAL.

NOTES

1. VOLTAGE MEASUREMENTS SHOWN ABOVE REFERENCE LINE; RESISTANCE MEASUREMENTS SHOWN BELOW LINE.
2. EXCEPT FOR XV2, ALL DC VOLTAGE AND RESISTANCE MEASUREMENTS ARE MADE WITH NEGATIVE TEST PROD AT CENTER OF TRANSFORMER T1.
3. MEASUREMENTS AT XV2 TAKEN WITH NEGATIVE TEST PROD AT PIN 1 OR 6; POSITIVE PROD AT PIN 7.
4. UNLESS OTHERWISE SHOWN, ALL MEASUREMENTS TAKEN WITH MODULATION SELECTOR IN SQ. WAVE POSITION.

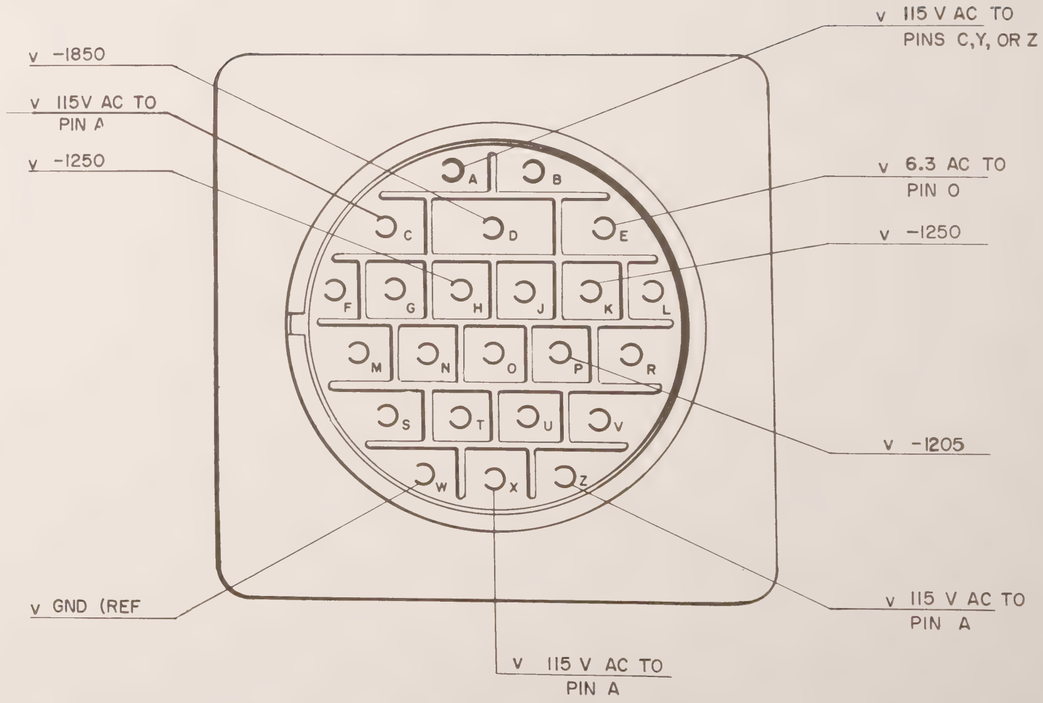

Figure 4-7. Model SSR Microwave Signal Source, Voltage and Resistance Measurements

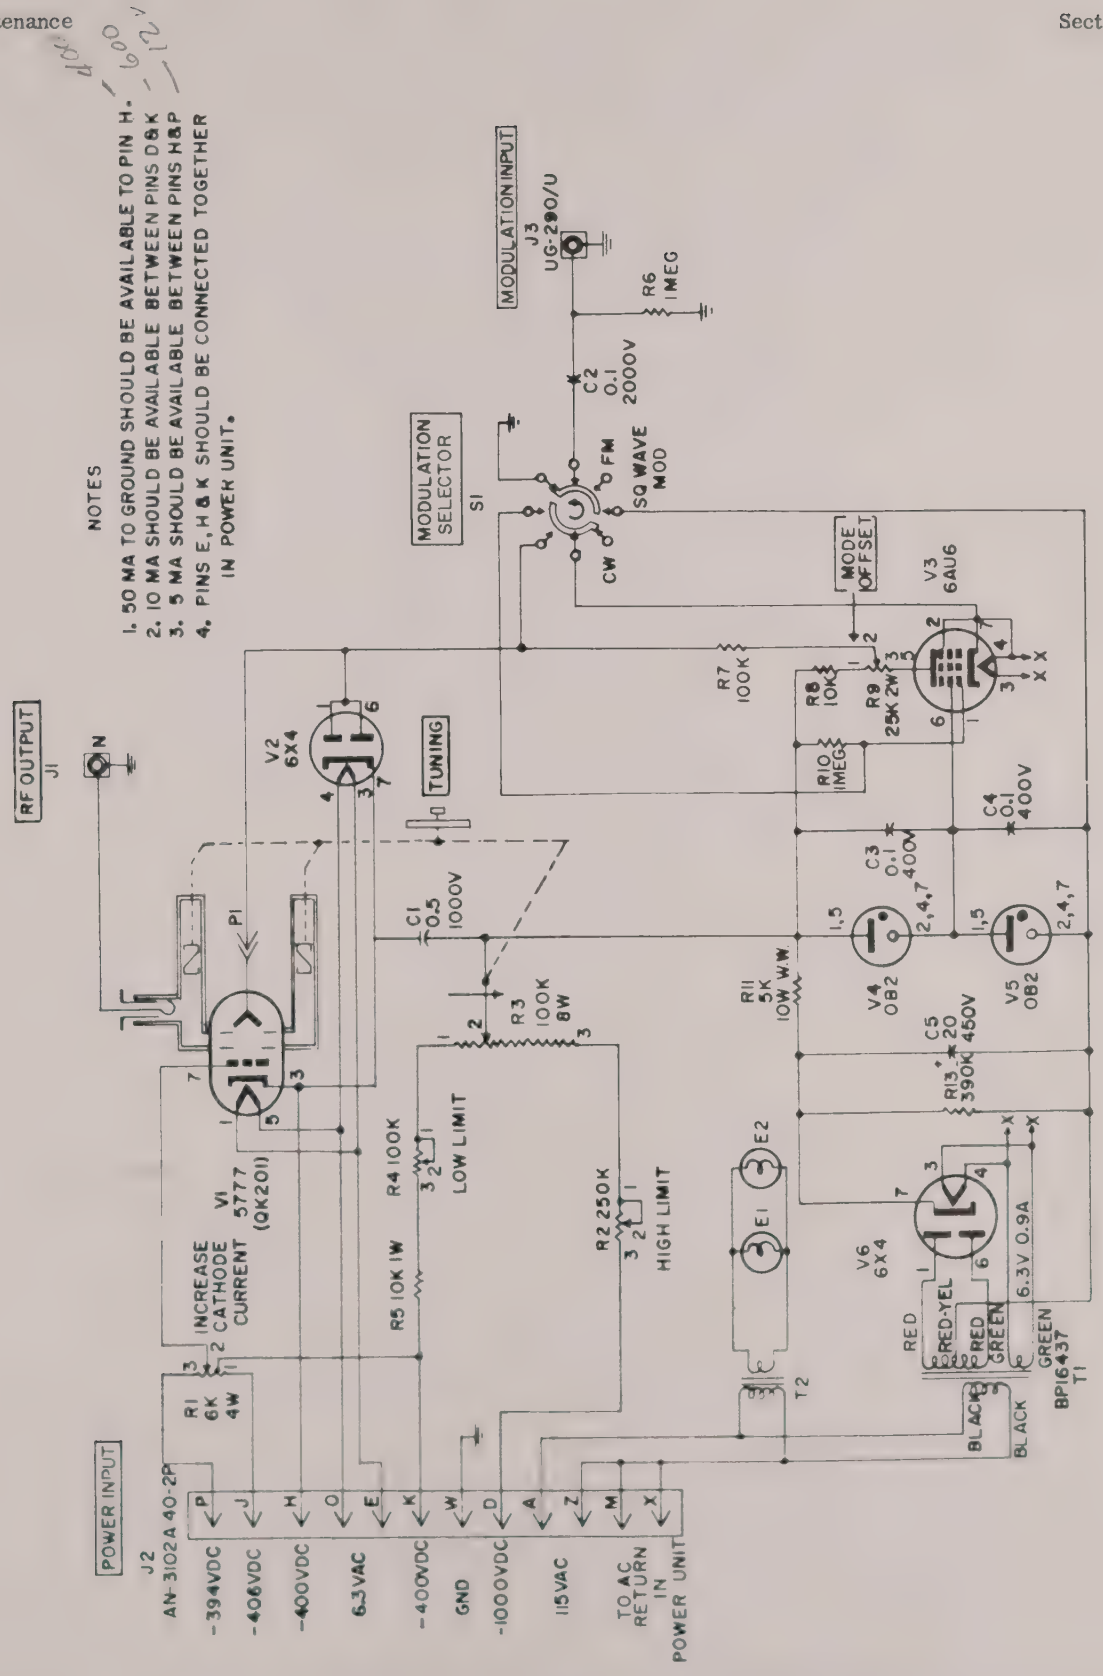

Figure 4-8. Model SSR Microwave Signal Source, Schematic Diagram

POLARAD ELECTRONICS CORP.

CONSULTANTS — DESIGNERS — MANUFACTURERS
43-20 34th Street Long Island City 1, N. Y.
EXeter 2-4500

REQUEST FOR MAINTENANCE

FROM:

COMPANY NAME _____ DATE: _____

ADDRESS: _____ INDIVIDUAL _____

_____ POSITION _____

SECTION OR DIVISION _____ PHONE NO. _____ EXT. _____

EQUIPMENT _____ DATE OF PURCHASE _____

MODEL _____ SERIAL NO. _____ ORDER NO. _____

TROUBLE REPORT:

A. Description of trouble _____

_____

_____

_____

_____

_____

B. Has trouble been localized? _____ If so, how and where: _____

_____

_____

_____

_____

_____

C. Instruments used and measurements taken, if any: _____

_____

_____

_____

D. Is trouble intermittent? _____

E. Hours of operation prior to this trouble _____

F. Date trouble occurred _____

G. Was factory consulted by telephone or letter prior to this request? _____

If so, give date and person to whom directed: _____

_____

H. Additional Comments: _____

_____

_____

_____

_____

_____

_____

When trouble develops requiring factory assistance, complete this form and send to:

Polarad Electronics Corporation
43-20 34th Street
Long Island City 1, New York
ATTENTION: Service Department

After this report has been analyzed by the Service Department, you will be notified when a field service engineer will call on you to make the necessary repairs. If your trouble can best be corrected at the factory, we will so notify you with instructions and authorization for returning the equipment.

NO EQUIPMENT MAY BE RETURNED TO THE FACTORY WITHOUT WRITTEN AUTHORIZATION

THESE ARE POLARAD REPRESENTATIVES IN THE UNITED STATES AND THROUGHOUT THE WORLD

DOMESTIC REPRESENTATIVES

ARIZONA
CALIFORNIA
NEVADA

T. Louis Snitzer Company
5354 W. Pico Blvd.
Los Angeles, Calif.
Webster 8-2074

T. Louis Snitzer Company
7814 Ivanhoe Ave.
La Jolla, Calif.
Glencourt 4-2191

T. Loius Snitzer Company
510 S. Mathilda Avenue
Sunnyvale, Calif.
Regent 6-6733

ARKANSAS
LOUISIANA
OKLAHOMA
TEXAS
NEW MEXICO

Industrial Associated Electronics
2311 Farrington
P.O. Box 10876
Dallas, Texas
Riverside 8-0777

Industrial Associated Electronics
Room 201B
International Airport Terminal
El Paso, Texas
Prospect 2-2441

ILLINOIS
INDIANA
WISCONSIN

Loren F. Green & Associates
5218 West Diversey Avenue
Chicago, Illinois
Palisades 5-6824

OHIO
WESTERN PA.
MICHIGAN

Harvey Teplitz & Co.
3543 Cornell Drive
Dayton 6, Ohio
Crestview 7-9178

Harvey Teplitz & Co.
671 Sycamore Drive
Cleveland, Ohio
Redwood 1-5676

Harvey Teplitz & Co.
19942 Inkster Road
Detroit 19, Michigan
Kenwood 7-9058

ALABAMA
FLORIDA
GEORGIA
MISSISSIPPI
N. CAROLINA
S. CAROLINA
TENNESSEE

Murphy and Cota
2110 Peachtree Road, N.W.
Atlanta 5, Ga.
Trinity 6-3020

Murphy and Cota
1106 Burke Street
Winston-Salem, N.C.
Winston-Salem 4-0750

Murphy and Cota
2319 E. South Street
Orlando, Fla.
Garden 4-2167

Murphy and Cota
250 Governors Drive
Huntsville, Ala.
Jefferson 6-9121

NEW ENGLAND

George Gregory Associates
7 Erie Drive
Natick, Mass.
Olympic 5-1330

George Gregory Associates
P.O. Box 243
Chesire, Conn.
Atwater 8-2900

MISSOURI
KANSAS
IOWA
NEBRASKA

Engineering Services Co.
4550 Main Street
Kansas City 11, Mo.
Jefferson 1-7765

Engineering Services Co.
6717 Vernon Avenue
St. Louis, Mo.
Parkway 6-2233

Engineering Services Co.
247 South Pinecrest
Wichita, Kansas
Murray 3-3751

Engineering Services Co.
1305 Oakland Gardens
Cedar Rapids, Iowa
Empire 5-6183

METROPOLITAN
NEW YORK CITY

Home Office
Polarad Electronics Corporation
43-20 34th Street
Long Island City 1, N.Y.
Exeter 2-4500
Joe P. Schindler
Alfred A. Goldberg
Richard J. Sheloff

VIRGINIA
WASHINGTON, D.C.
WEST VIRGINIA

Brimberg Associates
221 Investment Building
Washington 5, D.C.
Decatur 2-8000

MARYLAND
SOUTH NEW JERSEY
EASTERN PENNSYLVANIA

Eastern Instrumentation, Inc.
613 West Cheltenham Avenue
Philadelphia 26, Pa.
Waverly 7-6269

Eastern Instrumentation, Inc.
808 Ingleside Avenue
Baltimore 28, Md.
Ridgeway 4-3676

Eastern Instrumentation, Inc.
8616 Georgia Avenue
Silver Springs, Md.
Juniper 9-0100

NEW YORK STATE
(EXCEPT METROPOLITAN
NEW YORK)

Naco Electronics
119 Luther Avenue
Liverpool, N.Y.
GR 4-7481

Naco Electronics
74 Park Avenue
Rochester, N.Y.
Greenfield 3-4169

Naco Electronics
Stanley Theater Bldg.
261 Genesee Street
Utica, N.Y.
Redwood 2-3151

COLORADO
UTAH
WYOMING
MONTANA

McLoud & Raymond
5403 East Evans
Denver 22, Colorado
Skyline 6-1580

McLoud & Raymond
P.O. Box FG-146
Salt Lake City, Utah

OREGON
WASHINGTON
IDAHO

Hawthorne Electronics
700 S.E. Hawthorne Blvd.
Portland, Oregon
Belmont 4-9375

Hawthorne Electronics
Room 112 Administration Bldg.
Boeing Field
Seattle, Washington
Parkway 5-1406

DOMINION
OF
CANADA

Measurement Engineering Ltd.
P.O. Box 1352
Station O
Montreal, Quebec, Canada
National 7-4313

Mel Sales Ltd.
1969 Avenue Road
Toronto 12, Ontario

Mel Sales Ltd.
Arnprior, Ontario
Canada

OVERSEAS REPRESENTATIVES

ARGENTINA

Tecnitron
Charcas 1337
Buenos Aires

AUSTRALIA

Electronic Industries
Imports Pty Ltd.
139/143 Bouverie St.
Carlton, N. 3, Melbourne

AUSTRIA

INGLOMARK
Markowitsch & Co.
Mariahilfer Str 133
Vienna XV

BENELUX
Y.R.C.A.
Paradysstraat 92
Voorburg

BRAZIL

Emile H. Staub, S.A.
Caixa Postal 4612
Sao Paulo

CHILE

Fred Muller, Sag.
Casilo Coreo 3844
Santiago

CHINA

Heighton Scientific Co., Ltd.
49, South Yen-Ping Road
Taipei, Taiwan

CUBA

Cia Commercial Herza, S.A.
O'Reilly 504 (P.O. Box) 3433
La Habana

DENMARK

Ditz Schweitzer
Bredgade 37
Copenhagen

ENGLAND

Allied International Co., Ltd.
4, Tilney Street Park Lane
London W. 1

FINLAND

Orbis O/y
P.O. Box 2165
Helsinki — Toolo

FRANCE

Bureau de Liaison
113 Rue de L'Universite
Paris 7e

GERMANY

Rohde & Schwarz Vertriebs GMbH
Zweigniederlassung
Hohe Strasse 160-168
Koeln

GREECE

Ev. D. Devletoglou
44 Eleftheriou Venizelou
Athens

ICELAND

Eldung Trading Company
Halvarhvoli
Reykjavik

INDIA

B. N. Bose & Company
1st Floor, 8 Waterloo St.
Calcutta—1

ISRAEL

Electronic Equipment
6, Ibn Gvirol
Tel-Aviv

ITALY

Bay C.S.P.A.
Via Fabio Filzi N. 24
Milano (506)

JAPAN

Marubun Co., Ltd.
No. 1, 2-Chome
Odenmacho, Nihonbashi
Chuo-Ku, Tokyo

MEXICO

Standard Electrica de Mexico, S.A.
Calle Madrid 21-F
Mexico 4, D. F.

NEW ZEALAND

W & K McLean, Ltd.
7 Anzac Avenue
Auckland

NORWAY

P. N. Biorn
Tollbodat. 4
Oslo

PERU

V. M. LaPierre & Cia.
Los Alamos 375
San Isidro, Lima

PHILIPPINES

Radio Electronic Headquarters, Inc.
P.O. Box 1400
Manila

PORTUGAL

Equipamentos de
Laboratoria, Lda.
Apartado 458
Lisbon

SOUTH AFRICA

Leigh & Hurwitz (Pty) Ltd.
P.O. Box 3236
Johannesburg

SPAIN

Rema Leo Haag
Pla de Sto Domingo 1
Madrid

SWEDEN

Electronikbolaget AB
Barangsgatan 30
Stockholm SO

SWITZERLAND

Omni Ray AG
Dufourstr 56
Zurich 8

Manufacturers of Microwave & Electronic Equipment